


This page is designed to be left open so that you can simultaneously refer to controls and features of the AudioViewer/Projector identified on this page and discussed on following pages.

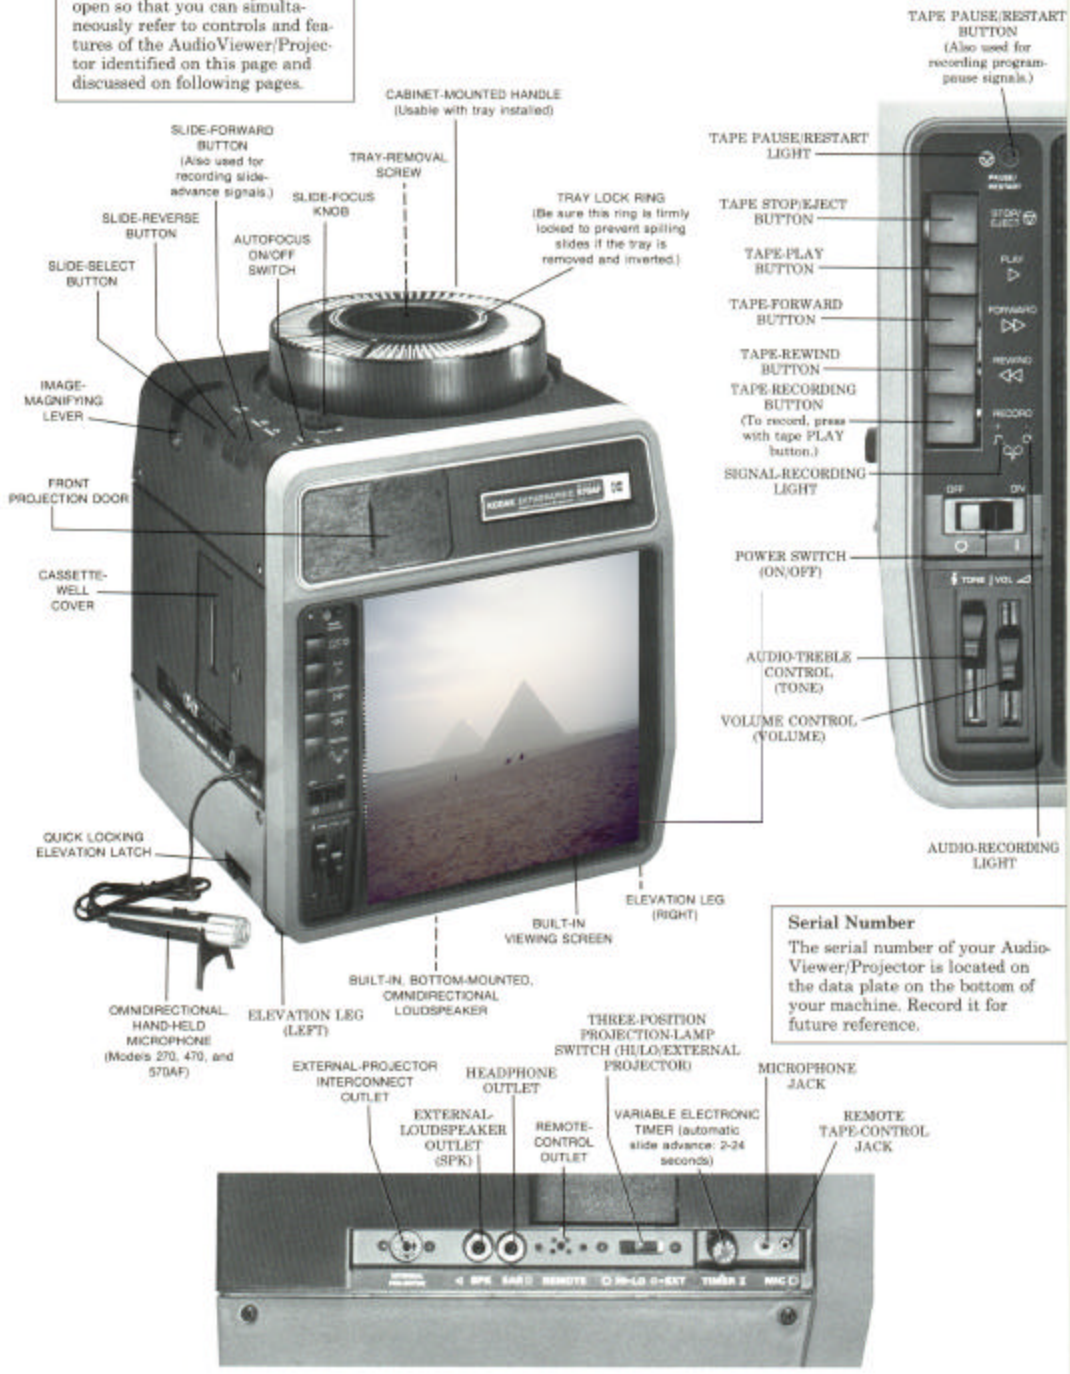

Serial Number
The serial number of your AudioViewer/Projector is located on the data plate on the bottom of your machine. Record it for future reference.